USER'S MANUAL



Covered by one or more U.S. PATENTS Nos. 6,165,069...6,270,404.

Other U.S. and foreign patents pending.

South African Patent #2001/2425.

Safety Instructions

- Read these instructions prior to operation.
- 2. Keep these instructions.
- 3. Heed all warnings.
- 4. Follow all instructions.
- 5. Do not use this apparatus near water.
- 6. Clean only with a damp cloth.
- 7. Do not block any of the ventilation openings. Only install in accordance with the manufacturer's instructions.
- 8. Do not install near any heat sources such as radiators, heat registers, stoves or other apparatus (including amplifiers) that produce heat.
- Do not defeat the safety purpose of the grounding-type plug, which has two blades with one wider than the other, and a grounding-type prong. The third prong is provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- 10. Protect the power cord from being walked on or pinched, particularly at plugs, convenience receptacles and the point where exiting the apparatus.

- 11. A surge suppressor may be needed to clean up the power for the DCS system. Failure to provide reasonably clean power to the system will void any warranty from the factory.
- 12. Only use attachments or accessories specified by the manufacturer.
- 13. Use only with table specified by manufacturer or sold with apparatus.
- Unplug this apparatus during lightning storms or when unused for long periods of time.
- 15. Refer all servicing to qualified personnel. Servicing is required when the apparatus has been damaged in any way, such as: damage to cord or plug, spilled liquid or fallen objects into apparatus, exposure to rain or moisture, does not operate normally or has been dropped.



Read all instructions prior to operation.





To reduce risk of electric shock do not perform any servicing other than that contained in the operating instructions unless qualified to do so.

ATTENTION!

The electronic boards in this product contain electrostatic devices that are susceptible to electrostatic charges, which may effect the performance of the product if not handled correctly. When servicing the product, where the electronic boards are removed from the various assemblies for repair or upgrades, ensure

the service personnel use ESD compliant wrist or heel straps, which are adequately grounded.

Failure to comply with standard ESD procedures, which causes damage to the electronic assemblies, may void the product warranty.

(

Contents

Safety Instructions	
Introduction	
Tabletop diagram	5
Section 1: First Time Setup and Basic Operation	6
Powering Up the Game	7
Power Reset Indication	7
Placing Blackjack Bets	7
Starting a New Round	7
Shuffling	8
Cut Procedure	8
Forcing a Shuffle	8
Insurance Sequence	8
Deal Prompt	9
Active Player Prompt	9
Dealer Buttons	9
Backing Up	9
Player Surrender	. 10
Hand Outcome Borders	. 10
Section 2: Game Options	. 11
Accessing Game Options	. 11
Game Settings	
Game Speed Settings	. 11
Adjust Sound Volume	. 12
Display Game Info	. 12
House Rules	. 12
History Records	. 12
Game Meters	. 13
Main Meters	. 13
Periodic Financial Bet Meters	. 13
Periodic Productivity Meters	. 13
Section 3: Rules Editor	. 14
Accessing the Rules Editor	. 14
Presentation Options	. 15
Dealer Play-out Mode	. 15
Suggested Play Display	. 15
Calibrate Sensors	. 15
View Current Rules Table	. 16
Edit Payout Multipliers	. 16
Inspect History Records	
Section 4: Definitions of House Rules	
Section 5: Edit Rules Table	. 20
Section 6: Recovery from Power Failure	. 21
Appendix	. 22
Status Messages	. 22
Fatal Error Indicators	. 22
Quick Reference Guides	. 23
At-A-Glance	
Basic Operations	. 25
Surveillance	. 27
Notes	. 29

I

Introduction

Advanced digital technology and state-of-the-art electronics have come together to create innovative table games. These casino games are played traditionally, but utilize digital cards delivered by the DCSTM Digital Card Delivery System.

HOW TO USE THIS MANUAL

See the Service Manual to set up the DCS system for first-time use. This User's Manual contains the following information:

Section 1 covers the first time setup and basic operational features.

Section 2 explains the use of Game Options and provides instructions on how to edit game settings.

Section 3 describes rules of the system and how to access major features.

Section 4 provides detailed rule definitions.

Section 5 details how to edit rules of play.

Section 6 details instructions in the event of a power recovery.

Appendix A lists status and error messages.

A selection of quick reference guides are available at the end of this book.

WARNINGS, NOTES AND TIPS

Warnings describe procedures that are to be followed for your system to operate properly.

Notes contain important information about procedures.

Tips contain helpful hints for ease of operation.


OBJECT OF THE GAME

Players bet against the dealer, with the hand closest to 21 winning.







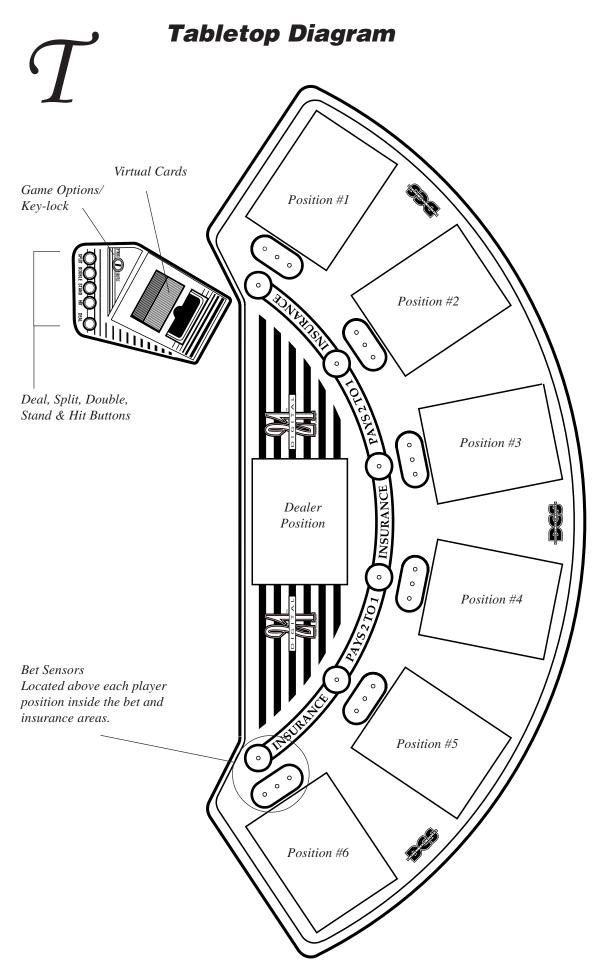

1



A Fixed Bet Table cannot be changed to a Variable Bet Table without clearing game memory.




Game memory can only be cleared by a service technician.

First Time Setup

Digital 21 offers a new option during initial setup. Casinos may now choose to assign fixed bets or allow variable bets.

- 1) Open Rules Door and connect keyboard.
- 2) Press the power switch to the ON () position.
- 3) Notice several messages displayed on the status line at the bottom of the dealer display (see Appendix, page 22).
- 4) Press DEAL to initialize. (Prompt will appear on the status line of the dealer display.)
- 5) Press any key on the keyboard when "Press Any Key to Proceed" appears on the status line.
- 6) Select Table type:
 - Fixed Bet
 - Variable Bet

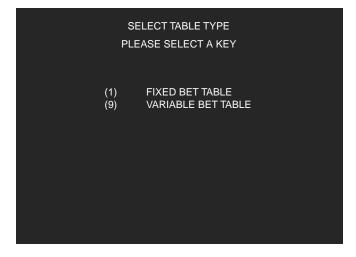

NOTE: Selecting a Variable Bet Table will direct the system to skip all financial menus and go to the "Calibrate Sensors" sequence.


- 7) Select Multipliers:
 - Units Per Bet
 - Blackjack Multiplier:
 - 1 to 1
 - 2 to 1
 - 3 to 2
 - Insurance Multiplier:
 - 1 to 1
 - 1 to 2
- 8) Calibrate Sensors. System will automatically enter the Sensor Calibration sequence upon completion of Table Type setup. See Service manual for detailed instructions.

Basic Operation

Powering up the Game

All power is controlled by the power switch located to the right of the power cord and voltage selector switch.

- 1) Press the power switch to the ON () position.
- 2) Notice several messages displayed on the status line at the bottom of the dealer display (see Appendix, page 22).
- 3) Review for any power-up exceptions appearing on the status line of the dealer display.
- 4) Confirm the Main door and the Rules door are closed.

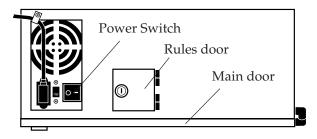

Power Reset Indication


Whenever power is interrupted, the text message "Power Reset" will be displayed on the status line of the dealer screen.

- The message remains visible through a complete round when power is interrupted between rounds.
- The message remains visible through the remainder of an interrupted round AND through a complete round if power is interrupted during a round.



Two types of bets may be placed on the Digital 21 unit:

- Main bets are placed in the yellow oblong circle.
- Insurance bets are placed in the gray circle.
- Double and Split bets are placed at the casino's discretion.

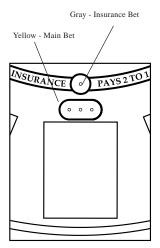

Starting a New Round

All bets must be placed inside the marked betting areas for the sensors to work properly.

- 1) Place bet in Main bet circle.
- 2) Press DEAL to start the round.
- 3) Cards are dealt to all active players and the dealer.



Warning:
Both doors must be closed to operate the game.



To resume play after a power disruption, please see Recovery from Power Failure, Section 6, page 21.

Shuffling

An automatic shuffle will occur upon start up and at the end of the round when the cut card appears, which reads "Shuffle Pending", as well as after every round if the "Shuffle After Every Round" option is selected by the casino (see Definitions of Rules, Section 4, page 18). A shuffle will also occur after any access door is opened and closed.

Cut Procedure


The shoe displays card edges with a red cut card line slowly moving through the shuffled deck(s), from the top to the bottom.

- 1) Request a player to say "Cut".
- 2) Press DEAL to cut the cards.
- 3) The cut is displayed by the two halves switching places. The second cut card appears as a red line at the pre-set penetration mark. Any burn cards are now automatically burned and the game is ready to play.

Forcing a Shuffle

Reshuffle within a round of play or between rounds.


- 1) Insert key in the key lock and toggle right to SHUFFLE.
- 2) Press STAND to shuffle.
- 3) Press DEAL to end the shuffle sequence.
- 4) Press DEAL to resume play.

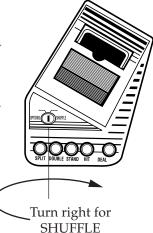

Insurance Sequence

Initiates when the dealer's up card is an ACE.

 - 1) "Insurance?" will appear on each player's display.
- 2) Insurance bets are placed within the Insurance bet circle.
- 3) Press the DEAL button to peek.
- 4) Outcome:
 - Dealer Blackjack will end the round and the corresponding outcome borders will be displayed (see Hand Outcome Borders, page 10). The message "Insurance Pays" is displayed at each player position that placed an insurance bet.





Note:
Game play will not resume until after all insurance bets are removed from the insurance bet circles.



Deal Prompt

A yellow prompt will appear in the lower left corner of the dealer display any time the dealer is required to press DEAL.



Active Player Prompt

A green prompt will appear in the upper right corner of the active player's display.

- After first two cards are dealt.
- After any insurance situation is resolved.
- Prompt will move from player to player as the round progresses, skipping any player with Blackjack.

Dealer Buttons

The dealer controls the entire game with five buttons:

- DEAL to deliver the first two cards to the active players and dealer. It is also a key button for other game functions.
- HIT to deliver one additional card and a new hand total.
- STAND to advance to the next player.
- DOUBLE to deliver one card and advance to the next player.
- SPLIT to separate each card into it's own hand and deliver one card to the first hand.



Backing Up

A misdeal can be reversed by using the back-up feature.

- 1) Insert key in the key lock and toggle left to OPTIONS.
- 2) Observe "Game Options Main Menu" on dealer's display.
- 3) Press SPLIT to backup.
 - Any decision, except surrender, may be reversed.
 - Backup will reverse one decision only per hand.
 - You cannot backup to a player showing a count of 21.
 - Backup will skip over any player with a Blackjack.



You can split up to four times. See Rules Editor, Section 5, page 20.



a round of play.





Player Surrender is irreversible.

Player Surrender

To surrender a player:

- 1) Remove the player's bet from the Main Bet area.
- 2) Press DEAL to complete the surrender.
- 3) Player's cards remain displayed and a white dotted border with "SURRENDERED" appear.
- 4) The Active Player prompt automatically advances to the next player.

Hand Outcome Borders

At the end of the round, when the outcome is determined, a border will appear on each active player display.



 
WINNER broken green border



NO WIN solid red border



PUSH dashed yellow border



SPLIT BORDER same as regular borders



SURRENDER dotted white border



BUST solid red border



BLACKJACK multicolored border


Game Options

ACCESSING GAME OPTIONS


"Game Options" may be accessed between rounds to edit game settings or to display game information.

- 1) Insert key in key lock and toggle left to OPTIONS.
- Observe "Game Options -Main Menu" on dealer's display.



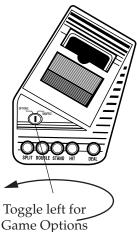

- 3) Choose from the following submenus:
 - DOUBLE "Game Settings"
 - STAND "Display Game Info"
- 4) Press DEAL to exit menu.

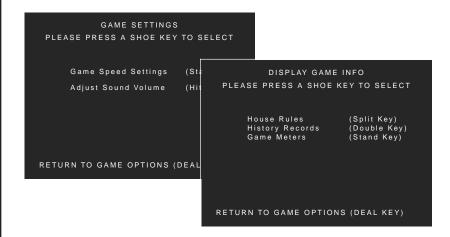

GAME SETTINGS

Game Speed Settings

Four speeds are available: 1 (slowest) through 4 (fastest) speed.

- 1) Insert key in key lock and toggle left to OPTIONS.
- 2) Press DOUBLE for "Game Settings".
- 3) Press STAND for "Game Speed Settings".
- 4) Press the corresponding shoe button to select a speed.
- 5) Press DEAL to exit menu.

Adjust Sound Volume

A range of 0 to 5 is available.


- 1) Insert key in key lock and toggle left to OPTIONS.
- 2) Press DOUBLE for "Game Settings".
- 3) Press HIT for "Adjust Sound Volume"".
- 4) Press the corresponding number to select the volume level.
- 5) Press DEAL to exit menu.

DISPLAY GAME INFO.

House Rules

Current setting of rules.

- 1) Insert key in key lock and toggle left to OPTIONS.
- 2) Press STAND for "Display Game Info".
- 3) Press SPLIT for "House Rules".
- 4) Press HIT to view the second page.
- 5) Press STAND to return to the first page.
- 6) Press DEAL to exit menu.

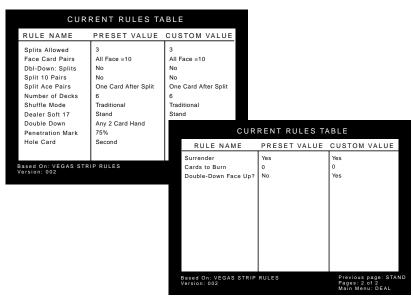

History Records

The last ten rounds of game history are stored in game memory.

- 1) Insert key in key lock and toggle left to OPTIONS.
- 2) Press STAND for "Display Game Info".
- 3) Press DOUBLE for "Game History Records".
- 4) Press DEAL to exit menu.





The house rules cannot be altered or affected in any manner from this screen.



Note: The last round played appears on the game history menu when first displayed, and is designated as Round 1.



Follow instructions at bottom of the screen to scroll through hands and rounds.



Game memory can only be cleared by a service technician.



Game Meters

Statistical data of previously played hands is maintained continuously until game memory is cleared.

- 1) Insert key in key lock and toggle left to OPTIONS.
- 2) Press STAND for "Display Game Info".
- 3) Press STAND to display "Game Meters".
- 4) Choose from the following three submenus:
 - SPLIT Main Meters
 - D-D Periodic Financial Bet Meters
 - STAND Periodic Productivity Meters

Main Meters

Complete game history of all rounds played.

- 1) Press SPLIT to view.
- 2) Press DEAL to exit menu.



Periodic Financial Meters


Complete financial history, for a fixed bet table, since the last time the periodic meters were cleared.

- 1) Press DOUBLE to view.
- 2) Press DEAL to exit menu.

Periodic Productivity Meters

Complete game history since the last time the periodic meters were cleared.

- 1) Press STAND to view.
- 2) Press SPLIT to clear this meter.
- 5) Press DEAL to exit menu.

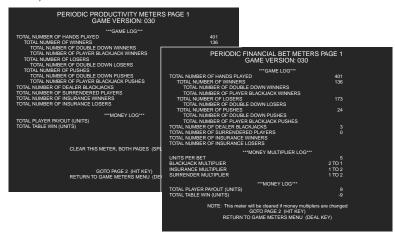

3



and a PC-compatible


keyboard with a PS-2 connector used.

Rules Editor

ACCESSING THE RULES EDITOR

The Rules Editor may be accessed during power up of the DCS unit or at the beginning of each round, prior to any cards being dealt.

- 1) Insert key into Rules door key lock and turn.
- 2) Open Rules door and connect keyboard.

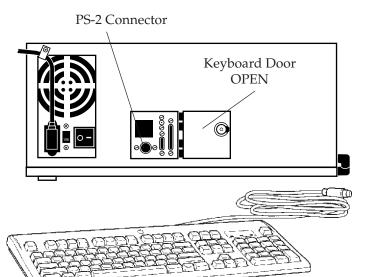

- 3) Observe the "Rules Editor Main Menu" on dealer's display.
- 4) Choose from the following submenus:
 - 1 Presentation Options
 - 2 View Current Rules Table
 - 3 Edit Rules Table
 - 4 Edit Payout Multipliers
 - 5 Inspect Game History Records
- 5) Press ESC (Escape) to exit menu.

RULES EDITOR - MAIN MENU PLEASE TYPE A NUMBER TO SELECT (1) Presentation Options (2) View Current Rules (3) Edit Rules Table (4) Edit Payout Multipliers (5) Inspect Game History Records (ESC) PLAY GAME NOW

PRESENTATION OPTIONS

PRESENTATION OPTIONS – MAIN MENU PLEASE PRESS A KEY TO SELECT (1) Dealer Play-out Mode (2) Suggested Play Display (3) Calibrate Sensors

Dealer Play-out Mode

Determines how the dealer's hand is played out.

1) Type the desired number and press ENTER to select:

(ESC) TO RETURN TO MAIN MENU

- 1 Deal cards automatically.
- 2 Deal cards manually. This selection requires the dealer to press HIT to deliver cards.
- 2) Press ESC to exit menu.

Suggested Play Display

Suggested strategy to Hit, Stand, Double and Split.

- 1) Type the desired number and press ENTER to select:
 - 1 Turn on "Suggested Play".
 - 2 Turn off the "Suggested Play" feature.
- 2) Press ESC to exit menu.

Calibrate Sensors

Game initialization requires sensors to be calibrated to existing light level in order to operate properly. Calibration should occur with the casino's lightest colored playing chips to insure optimum calibration. Please see the Service Manual for detailed instructions.



VIEW CURRENT RULES TABLE

View a complete list of current, active rules. See Game Options, Section 2, page 12 to see an example of the menu.

EDIT RULES TABLE

See Section 5, page 20 for details.

EDIT PAYOUT MULTIPLIERS

Once a table is established as a Fixed-bet table, the bet units and payout multipliers can be edited.

- 1) Type the desired number and press ENTER to edit:
 - Edit the number of Units per Bet.
 - Edit the Blackjack Payout Multiplier.
 - Edit the Insurance Multiplier.
 - Edit the Surrender Multiplier.
- 2) Press ENTER to save and exit menu.

Note: Changing multipliers will zero out the periodic bet meter.

MONEY MULTIPLIERS TO MODIFY, SELECT A KEY

- Units Per Bet:
- (2) (3) (4) Blackjack Multiplier:
- Insurance Multiplier:
- Surrender Multiplier:

NOTE: Changing mulitipliers will zero out periodic bet meter. (ENTER) SAVE CHANGES - RETURN TO PREVIOUS MENU (ESC) CANCEL CHANGES - RETURN TO PREVIOUS MENU

> CHANGE FIXED UNITS PER BET TO MODIFY, TYPE IN NEW VALUE

> > **Current Value:** New Setting:

(ENTER) SAVE CHANGES - RETURN TO PREVIOUS MENU (ESC) CANCEL CHANGES - RETURN TO PREVIOUS MENU

CHANGE BLACKJACK MULTIPLIER TO MODIFY, SELECT A KEY

ALLOWED SELECTIONS:

(1) 1 TO 1 (2) 2 TO 1 (3) 3 TO 2

Current Value:

New Setting:

(ENTER) SAVE CHANGES - RETURN TO PREVIOUS MENU (ESC) CANCEL CHANGES - RETURN TO PREVIOUS MENU

> CHANGE INSURANCE MULTIPLIER TO MODIFY, SELECT A KEY

ALLOWED SELECTIONS:

(1) 1 TO 1 (5) 1 TO 2

Current Value: New Setting:

(ENTER) SAVE CHANGES - RETURN TO PREVIOUS MENU (ESC) CANCEL CHANGES - RETURN TO PREVIOUS MENU

INSPECT HISTORY RECORDS

View a complete game history of the last ten rounds played. See Game Options, Section 2, page 12 to see an example of the menu.



Definitions of House Rules

NUMBER OF SPLITS ALLOWED

Set the number of splits permitted.

- 1) Type the desired number and press ENTER to select:
 - Options: 0 to 3

FACE CARD PAIRS

Determine how a pair of 10-value cards is interpreted.

- 1) Type the desired number and press ENTER to select:
 - 1 Loose, All Faces = 10
 - 2 Strict, Like Faces Only

DOUBLE DOWN ON SPLITS

Allow a double down on a split hand.

- 1) Type the desired number and press ENTER to select:
 - 1 No
 - 2 Yes

SPLIT 10 PAIRS

Set the option of splitting a pair of tens.

- 1) Type the desired number and press ENTER to select:
 - 1 No
 - 2 Yes

SPLIT ACE PLAY

Set the splitting aces option.

- 1) Type the desired number and press ENTER to select:
 - 1 Split Only Once: receive one additional card.
 - 2 Multiple Splits: play out the hand(s).

NUMBER OF DECKS

The quantity of decks used in play.

- 1) Type the desired number and press ENTER to select:
 - Options: 1-12 decks

SHUFFLE MODE

Set the type of shuffle.

- 1) Type the desired number and press ENTER to select:
 - 1 Traditional:

Deals cards sequentially from the shoe. The shoe is not reshuffled until penetration mark is reached.

2 Random Balance:

Deals cards randomly from a shuffled shoe.

• 3 Shuffle Every Round:

Deals cards sequentially from a newly shuffled shoe each round.

DEALER SOFT 17

Determine if the dealer must stand or hit on a soft 17.

- 1) Type the desired number and press ENTER to select:
 - 1 Stand
 - 2 Hit

DOUBLE DOWN

Restrict the double down option.

- 1) Type the desired number and press ENTER to select:
 - 1 Any 2 card Hands
 - Hard 2-card hand: neither card is an ACE
 - 3 9, 10, 11 Hands
 - 4 10, 11 Hands
 - 5 11 Hands Only

PENETRATION MARK

Placement of the second cut card.

- 1) Type the desired number and press ENTER to select:
 - 1 50%
 - 2 66%
 - 3 75%
 - 4 85%

DEALER'S HOLE CARD

Determine when the dealer's hole card appears.

- 1) Type the desired number and press ENTER to select:
 - 1 First Card
 - 2 Second Card
 - 3 Both cards dealt face up
 - 4 Hole card dealt last (European)

SURRENDER

Allow a player surrender.

- 1) Type the desired number and press ENTER to select:
 - 1 No
 - 2 Yes

CARDS TO BURN

Number of cards to burn after each shuffle.

- 1) Type the desired number and press ENTER to select:
 - Options: 0 to 10 cards

DOUBLE DOWN FACE UP?

Determine how to deal the double down card.

- 1) Type the desired number and press ENTER to select:
 - 1 Face Down
 - 2 Face Up



A mod

A red line on the shoe display show the second cut card at the set penetration mark.



If the Double down card is dealt face down and causes the hand to bust, the card will be flipped over and "BUST" will display immediately.




Tip

Instructions are listed along the bottom of the menu to assist in rules editing.


Edit Rules Table

When the unit is initialized for the first time, the preset (default) values govern the rules of play. Rules may be customized according to casino requirements. Customized rules are stored in game memory and become the house rules upon exit.

- 1) Open the Rules door and connect keyboard.
- 2) Observe "Rules Editor Main Menu" on the dealer display.
- 3) Press 3 to edit rules.

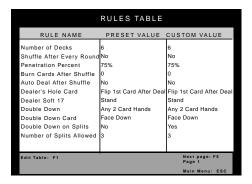

- 4) Press F1 to edit the rules.
- 5) Use the up/down arrows to highlight the rule to change.
- 6) Use the right arrow to select the options.
- 7) Type the rule choice number and press ENTER to accept.
- 8) Repeat the procedure for all changes.
- 9) Press F5 to advance to the next rules page.
- 10) Press F4 to return to the first rules page.
- 11) Press F2 to save all changes.
- 12) Press ESC to exit menu.
- 13) Disconnect keyboard and wait for message, "WARNING! RULES DOOR OPEN" before closing the rules door.

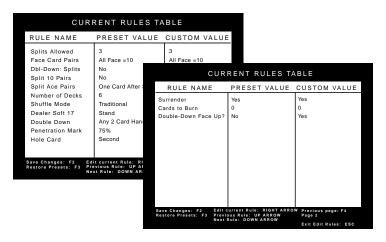





automatically restart.

Recovery from Power Failure

After a new round has begun and up to the last card is played in that round, all details of the game are stored in game memory. A power failure will cause a reboot of the unit and the game will be restored to the point where power failure interrupted play. Nothing will be lost and the game may be resumed with all data intact. When the game powers up, it will recover from the power failure and preserve the rules set by the casino.

Power Reset

- 1) Observe the game initialization sequence appears on the dealer display.
- 2) Observe the messages that appear during initialization on the status line at the bottom of the dealer's display. (See Appendix, page 22, for a list of messages.)
- 3) Observe the last messages that appear on the status line, ending with, "Initialization complete".
- 4) Observe that the game advances through the round to the point of power interruption.
- 5) Resume play.



Note: Game play will not resume if any doors are open.

Appendix

Status Messages

Initialization Messages

- Preparing game imaging system
- Loading game image nnn of nnn
- Dealer display initialized
- Player x display initialized
- Finished initialization of image system
- Loading opti931 drivers ...
- Loading sounds ...
- Finished preparing sound system
- Initialize comm. port 1
- Initialize comm. port 2
- Reading game data ... please wait
- Loading sensor calibration data
- Power reset [string indicating the jurisdiction, software label, software version]
- Initialization complete.

Game Messages:


- "Out of Cards" displays on the dealer display when there are not enough cards in the shoe to complete the round. All hands are completed with a PUSH and the game forces a shuffle.
- "Warning! Rules Door Open"
- "Warning! Main Door Open"

Fatal Error Indicators

A class of fatal errors exist that will force the unit to exit the game and attempt to reboot. Such errors will likely be linked to hardware malfunctions, such as faulty memory or a bad game memory battery. When the fatal error occurs, a message will briefly appear on the dealer display and the computer will attempt to reboot itself. If the machine cannot recover from the error, it will make repeated attempts to reboot. If the unit is unable to reboot, a service technician should check the unit.



QUICK REFERENCE GUIDE AT-A-GLANCE

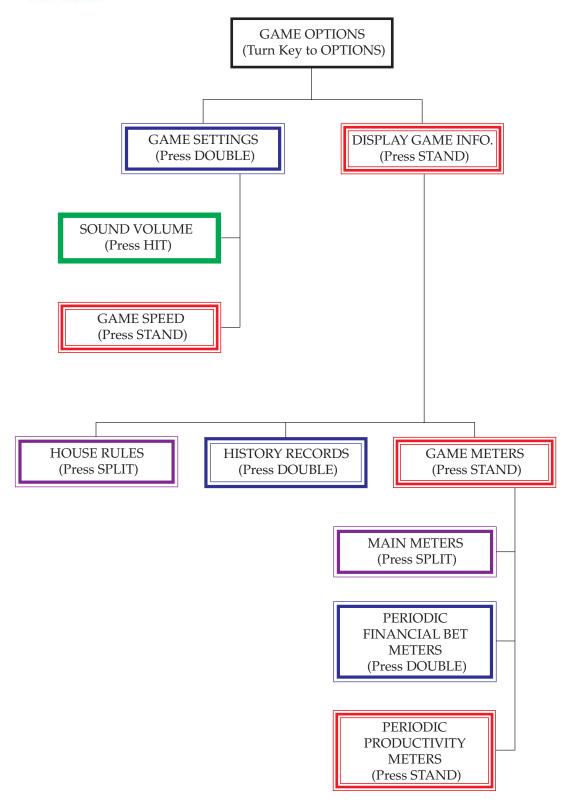



QUICK REFERENCE GUIDE AT-A-GLANCE

INSURANCE	Press the DEAL button to peek.
SURRENDER	Remove player's bet from the bet sensor and press the DEAL button.
CLEAR SCREENS	Press the DEAL button at the end of the round.
SHUFFLE / CUT	Press the DEAL button to shuffle after the cut card appears. Press the DEAL button to cut after shuffle is complete.
FORCING A SHUFFLE	Floor Supervisor: Insert key into shoe key lock. Toggle right to SHUFFLE. Confirm forced shuffle by pressing STAND.
	(OPTIONSSTAND)
MISTAKES	Floor Supervisor: Insert key into shoe key lock. Toggle left to OPTIONS. Select "Back Up" by pressing SPLIT.
	(OPTIONSSPLIT)
DISCREPANCIES	Floor Supervisor: Insert key into shoe key lock. Toggle left to OPTIONS. Select "Display Game Info" by pressing STAND. Select "History Records" by pressing DOUBLE. Within "History Records" press DOUBLE to view the next hand. Press STAND to view the previous round.
	(OPTIONSSTANDDOUBLE)



QUICK REFERENCE GUIDE Basic Operations

Powering up the Game

Press the power switch, located on the CPU mounted under the table, to the ON (-) position. A text message will appear on the status line at the bottom of the dealer display instructing the operator to "Please press DEAL key to proceed with initialization."



Placing Bets and Starting a New Round

Main bets and double down bets are placed in the yellow oblong circle. Split bets are placed at the casino's discretion. Insurance bets are placed in the gray circle. Placing a bet activates the player's display, changing it from a logo screen to an active display. After the dealer confirms all bets have been placed properly, the dealer must press DEAL to deliver cards to all players and the dealer.

Shuffling

The shoe will require shuffling when the game is first powered up and at the end of any round when the cut card appears, which reads "Shuffle Pending." To initiate the shuffle press DEAL.

NOTE: All bets must be placed prior to initiating the shuffle. Please see User's Manual for additional shuffle features.



Game Options Key: Right for "SHUFFLE"

Cut Procedure

The shoe displays card edges with a red cut card line slowly moving from top to bottom through the shuffled deck(s). The dealer will ask a player to say "Cut" at the place they would like the deck(s) cut. The dealer presses DEAL as the selected player announces "Cut." Any burn cards are now automatically burned and the game is ready to play.

Forcing a Shuffle

Insert the key in the shoe key lock and toggle right to SHUFFLE. The menu on the dealer's display will instruct the dealer to "Confirm a Forced Shuffle" by pressing STAND. The shoe's graphics will display the shuffle and the standard cut procedure will not be required.

Insurance Sequence



When the dealer's up card is an ACE, the insurance sequence is automatically initiated. The message "Insurance?" will appear on each player's display. After all insurance bets have been placed, the dealer presses DEAL to peek at the down card. If the dealer has a Blackjack, the game is immediately concluded. If the dealer holds no Blackjack, a message "No Blackjack" is seen on the dealer's display. All insurance bets are taken and the game resumes. The game will resume ONLY after all insurance bets have been removed from the insurance bet circle.



QUICK REFERENCE GUIDE Basic Operations



Deal Prompt

Any time the dealer's next required action is to press DEAL, a yellow prompt will appear in the lower left corner of the dealer's display.



Active Player Prompt

Once all players have received their first two cards and any insurance situation has been resolved, a green flashing PLAY prompt will appear in the upper right corner of the active player display, indicating whose turn it is to play. The PLAY prompt will automatically advance to the next active player after each hand is completed, skipping any player with a Blackjack.

Dealer Buttons

The dealer controls the entire game with five buttons. Players indicate their intentions using standard Blackjack hand signals and the dealer presses the corresponding button.

DEAL Delivers the first two cards to all active players and

the dealer, and is also used as a key button for other

game functions.

HIT Delivers one additional card and a new hand total.

STAND Advances play

to the next

active player.

DOUBLE Delivers a

single card and advances play to the next

active player.

SPLIT Separates each card into

a new hand and delivers one card to the first hand.



available per hand.

Backing Up a Mistake

Insert the key in the shoe key lock and toggle left to OPTIONS. Select "Back Up" by pressing SPLIT. The player's display will show their original cards prior to the misdeal. When a misdealt card is removed it is burned and will not be available to the next hand.

Player Surrender

Remove the player's bet from the bet sensor and press the DEAL button. The surrendered player's cards remain on the player's display and a white, dotted border with the word "SURRENDERED" appears.



QUICK REFERENCE GUIDE Surveillance



Deal Prompt

Any time the dealer's next required action is to press DEAL, a yellow prompt appears in the lower left corner of the dealer's display.



Active Player Prompt

Once all players have received their first two cards and any insurance situation has been resolved, a green flashing PLAY prompt will appear in the upper right corner of the active player display, indicating whose turn it is to play. The PLAY prompt will automatically advance to the next active player after each hand is completed, skipping any player with a Blackjack.

Hand Outcome Borders

At the end of the round a border appears on each active player's display indicating the outcome.



WINNER broken green border



NO WIN solid red border



PUSH dashed yellow border



SPLIT BORDER same as regular borders



SURRENDER dotted white border



BUST solid red border



BLACKJACK multicolored border

QUICK REFERENCE GUIDE Surveillance



Bet/Insurance Circles

Each player's position has two bet areas: Main bets are placed in the yellow oblong circle. Insurance bets are placed in the gray circle directly above the Main bet area.

Player Displays

There are 6 player displays. Each individual player's display shows all cards dealt to the player, the active player's cards, and the dealer cards.

Shoe


The shoe/shuffler display graphically shows the shuffling of the virtual cards, the cut card, the penetration level, and the cards as they are being dealt out of the shoe. The keylock is located on the back of the shoe. Toggle key left to "Options" to access Game Options, which allows the dealer to back up, view game settings, & display game information.

Suggested Strategy

The active player is given a suggested strategy: Hit, Stand, Double or Split. This feature is optional.

Dealer Buttons

The dealer controls the game with these five buttons: Deal, Split, Double, Stand and Hit.

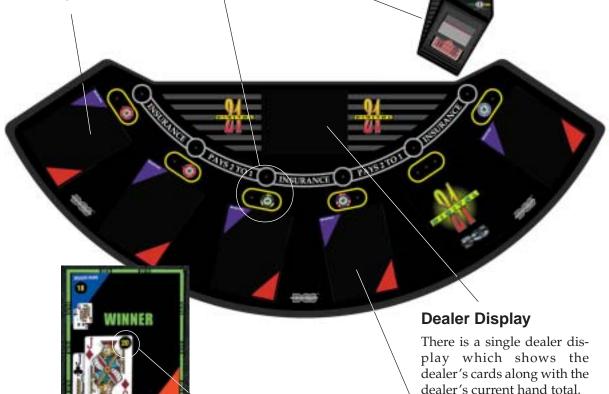

Instant Outcome Recognition

At the end of each round, colored borders and messages instantly let the players, dealer, and house know each hand's outcome.

Automatic Totaling

The hand total for the players and the dealer are always displayed. The system informs the player of their current situation, such as: Insurance?, Blackjack!, or Winner.

Automatic Activation

When a bet is placed in the bet circle, the system will automatically go to an active display awaiting the deal. When no bet has been placed, or the game position is idle, the logo screen is displayed.

Notes	
	_

Print Date: 9/2003